CVT SYSTEM GENERAL/CONTROL/DETAILS PARTS LOCATION

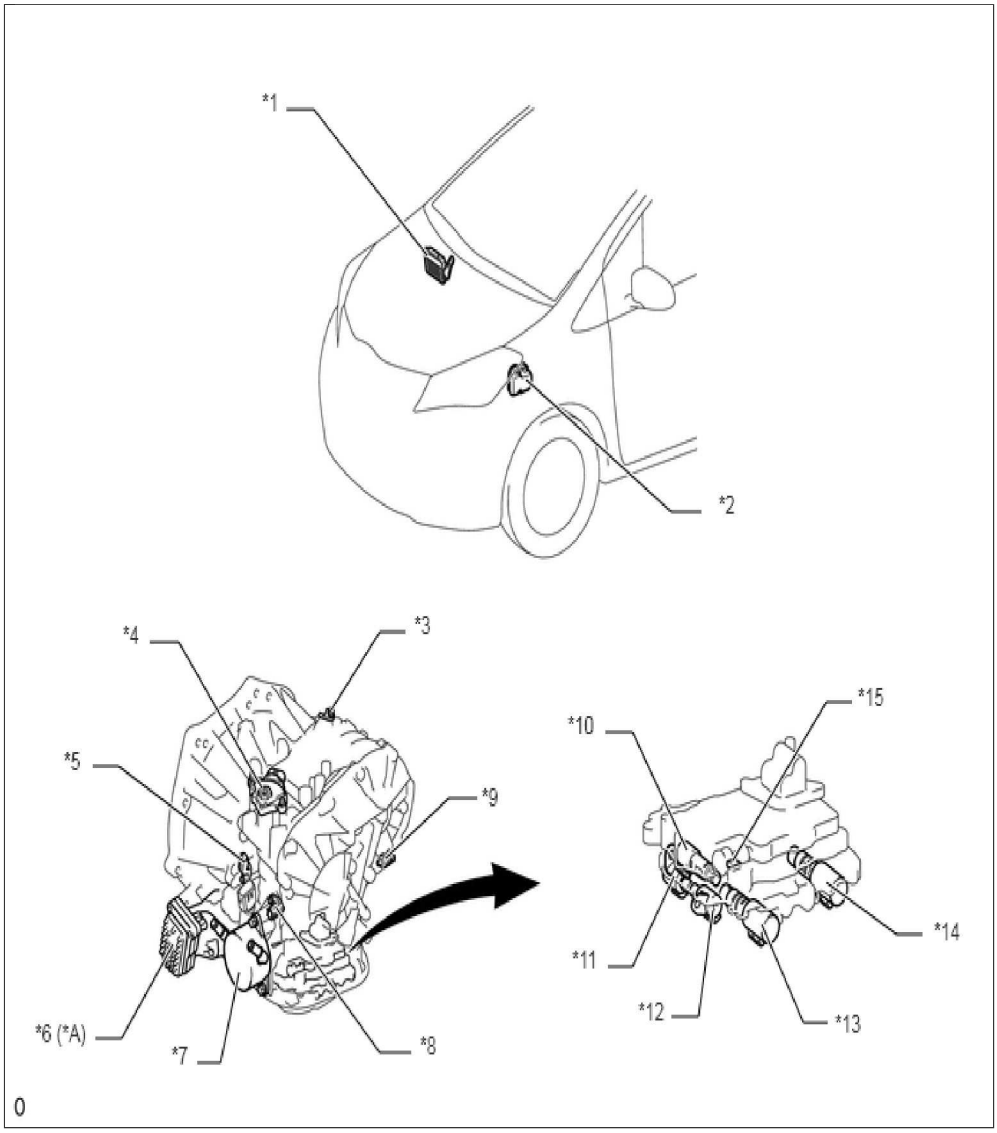

Table 1. Text in Illustration

*A	Models with Stop and Start System	-	-
*1	ECM	*2	Skid Control ECU (Brake Actuator Assembly)
*3	Transmission Revolution Sensor (NOUT)	*4	Park/Neutral Position Switch Assembly
*5	Transmission Revolution Sensor (NT)	*6	Oil Pump Motor Assembly
*7	Transmission Oil Cooler	*8	Transmission Revolution Sensor (NIN)
*9	Oil Pressure Sensor	*10	Shift Solenoid Valve SLU

*11	Shift Solenoid Valve DS2	*12	Shift Solenoid Valve DS1
*13	Shift Solenoid Valve SLT	*14	Shift Solenoid Valve SLS
*15	CVT Fluid Temperature Sensor	-	-

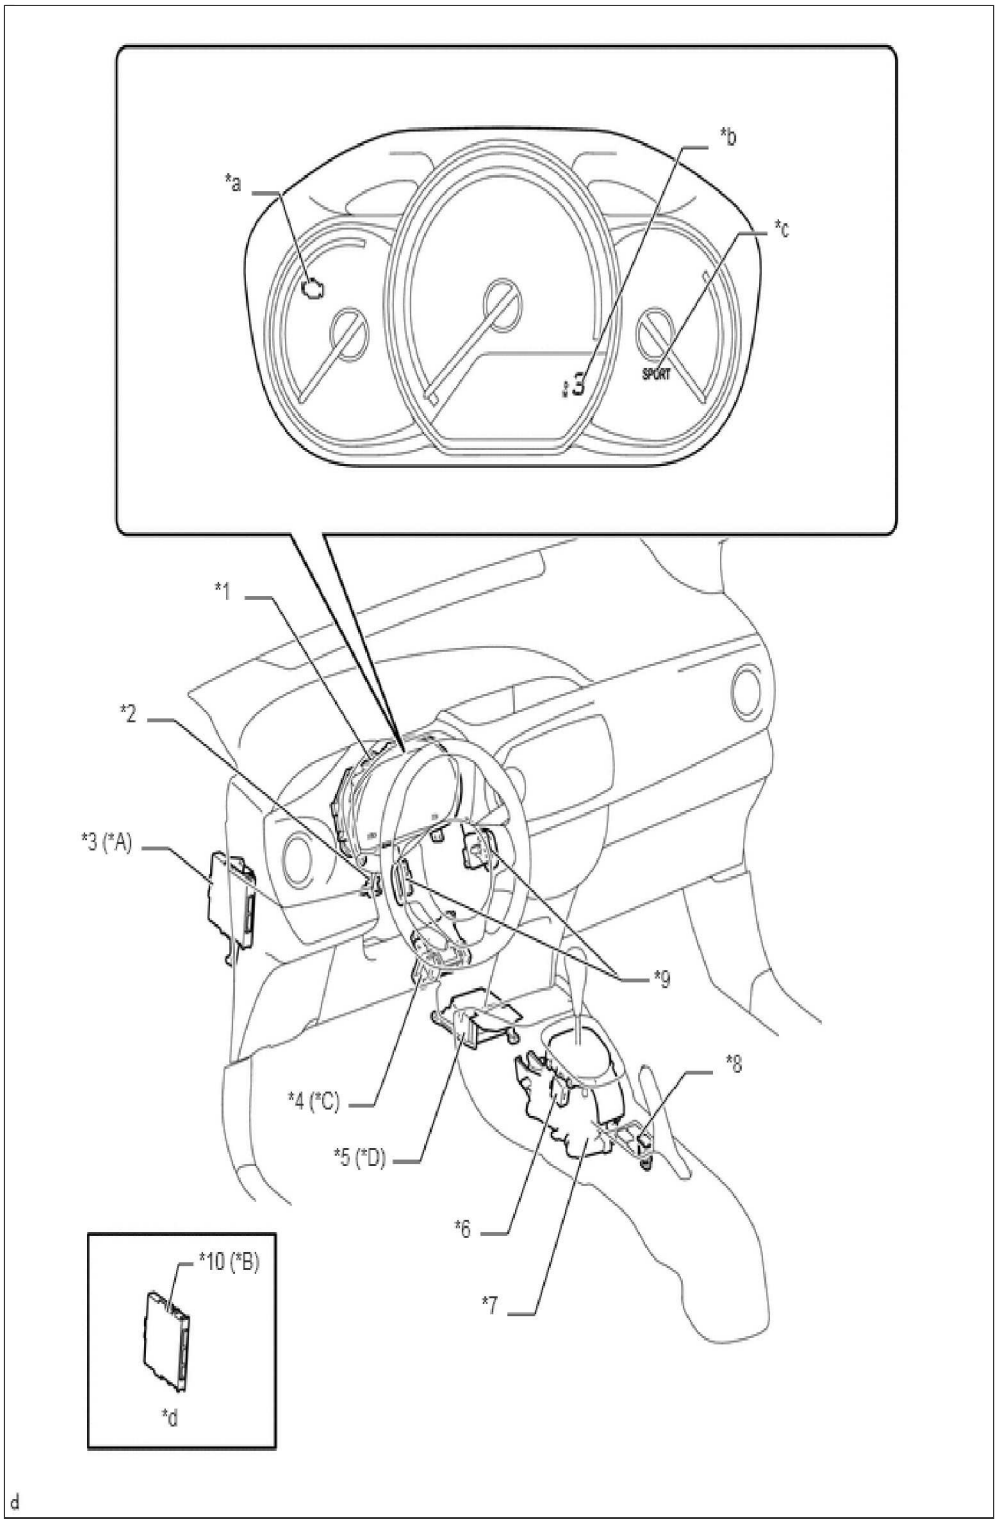

Table 2. Text in Illustration

*A	Models with Stop and Start System	*B	Models with Entry and Start System
*C		*D	

	Models with Air Conditioning System		Models with ABS with EBD, Brake Assist, TRC and VSC
*1	Combination Meter Assembly	*2	Stop Light Switch Assembly
*3	Engine Stop and Start ECU	*4	Air Conditioning Amplifier Assembly
*5	Airbag Sensor Assembly	*6	Shift Lock Control ECU Sub-assembly
*7	Shift Lock Control Unit Assembly - Transmission Control switch - P Detection Switch - Shift Lock Solenoid	*8	Pattern Select Switch Assembly
*9	Shift Paddle Switch (Transmission Shift Switch Assembly)	*10	Certification ECU (Smart Key ECU Assembly)
*a	MIL	*b	Shift Position and Shift Range Indicator
*c	Sport Mode Indicator	*d	Refer to the Service Bulletin for the installation of the part